


INSTALLATION/MAINTENANCE/GUARANTEED

- PLINTH** The plinth should be positioned on a firm level surface. Levelling operations should not be carried out until the turntable has been fully assembled with arm and platter.
- PLATTER** Care should be taken in fitting the platter to the motor shaft, and it should be lowered gently until it seats. One light firm press on the centre of the platter is all that is required to complete seating. The strobe disc should then be fitted firmly over the platter.
- ARM/
CARTRIDGE** When fitting the arm of your choice please follow the makers instruction procedure and recommendations. The earth connection of the arm leads should be connected to one of the three screws fixing the motor to the plinth on the underside of the turntable. Cartridge fitting should also be carried out to the Arm/Cartridge manufacturers instructions. Screws and Allen key are supplied for Arm mounting.
- DUST COVER** The heavy acrylic lid is fitted by opening the hinges to approx. 90° and then sliding them into the hinge brackets on the rear of the lid. The hinges can be carefully tightened or loosened to adjust movement capabilities of the lid to the required tension.

**CONTROL
UNIT/
POWER
SUPPLY**

The smaller of the two cables at rear of control unit (see sketch) should be connected to the turntable under the plinth. The mains cable, which is adjacent to the mains fuse, should be fitted with a suitable plug for connection to mains. Ensure that the voltage figure on the voltage selector locking plate conforms to local mains supply.

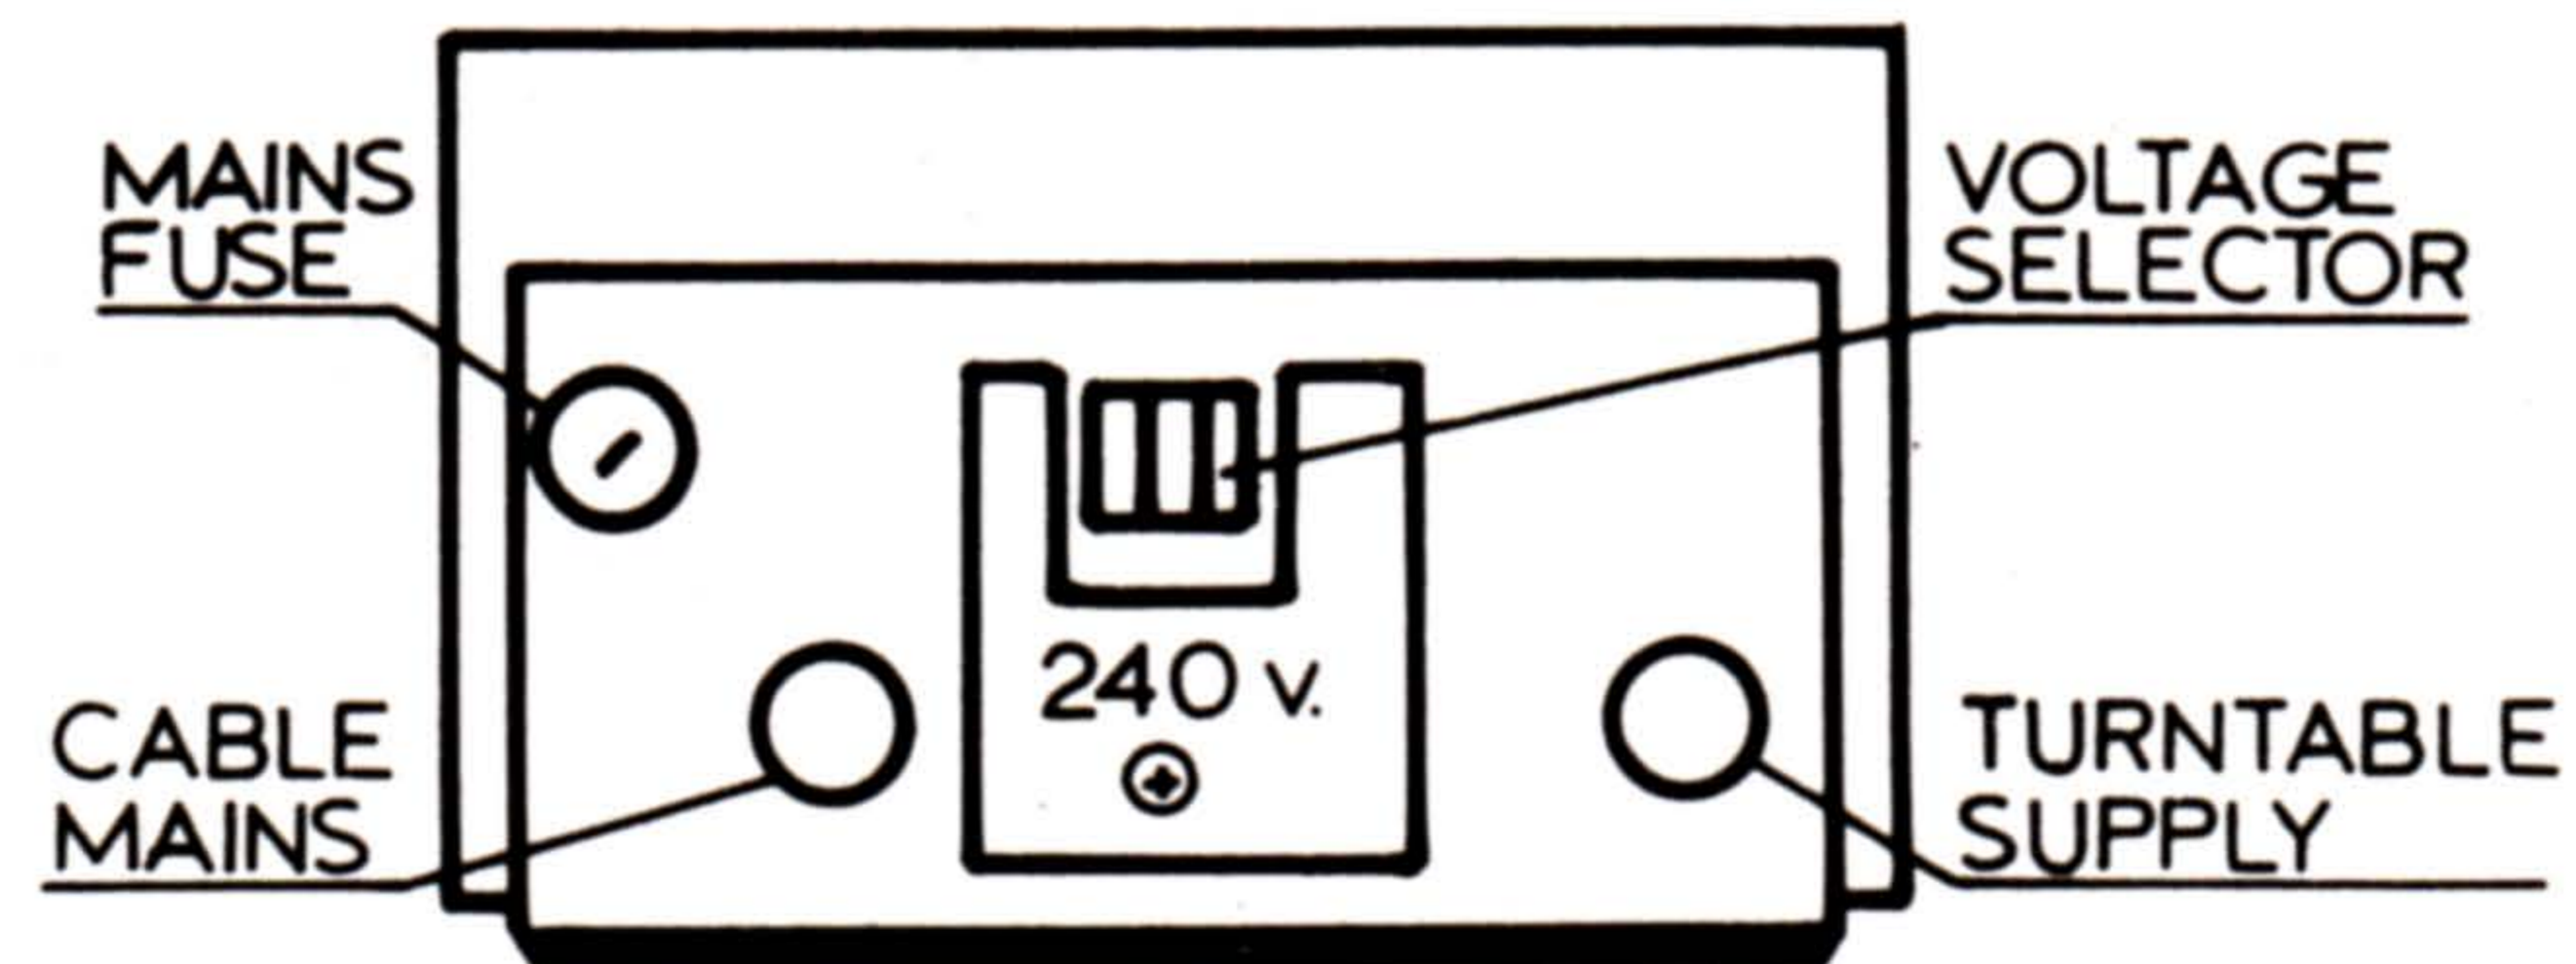

CONTROL UNIT. REAR.

The control knobs on the box inscribed 33 and 45 are for fine speed adjustment, and the switches directly in front are the respective speed selectors. The single push switch on its own is the power on/off switch. The power indicator is a bright LED on the front



AFFIX
STAMP

Janorhurst Ltd.

Century House,
Shortmead Street,
Biggleswade,
Beds.

face of the control box, and it also doubles as a strobe light source in low light conditions.

It is advisable to have the control box positioned a little way from the deck to eliminate possibilities of hum and mains interference.

LEVELLING

To be completed properly, levelling operations should be carried out using a spirit level on the platter. The edge of the deck should be lifted slightly and the bottom part of the suspension foot turned clockwise to lower, or anti-clockwise to raise. Care should be taken to treat the suspension feet gently, and the deck should always be lifted rather than slid along a surface when being placed.

SPEED ADJUSTMENT

When the controls have been adjusted the addition of a record will not significantly affect the platter speed. However, if required, the strobe disc can be removed from the platter and refitted on top of the disc. This will allow the speed to be regulated during playing, and will also aid record stability.

MAINTENANCE

The motor bearings are sealed and permanently lubricated, and no further servicing is required other than checking for cleanliness occasionally. Finger prints etc. can be removed from acrylic surfaces by polishing with a soft dry cloth, or a soft cloth moistened with methylated spirit. The unit should be disconnected from the power supply during this operation.

Solid slate plinths are dressed with a soft cloth lightly moistened with linseed oil. It should be applied in a circular motion, then wiped off with a soft dry cloth after 5 minutes.

The JBE series 3 has been designed to give years of trouble free service and pleasure, and is simple to set up and maintain.

GUARANTEE

This equipment is guaranteed for two years against faulty materials and workmanship, and is subject to the following conditions:-

- (A) The guarantee must be completed in full and returned to JANORHURST LTD. within 10 days of purchase.
- (B) The guarantee excludes damage caused by misuse, neglect or unauthorised personel attempting modification or repair.
- (C) The guarantee excludes damage caused and not attributable to JANORHURST or their agents; or any third party liability.
- (D) The guarantee is non transferable.



REGISTRATION

Model No. Serial No. Purchase Date.....

Customer Name

Address
.....
.....

Where Purchased
.....

Your comments would be appreciated.....
.....
.....